SERVICE MANUAL

FISHER

CA-866

Integrated Stereo Amplifier

(EUROPE)

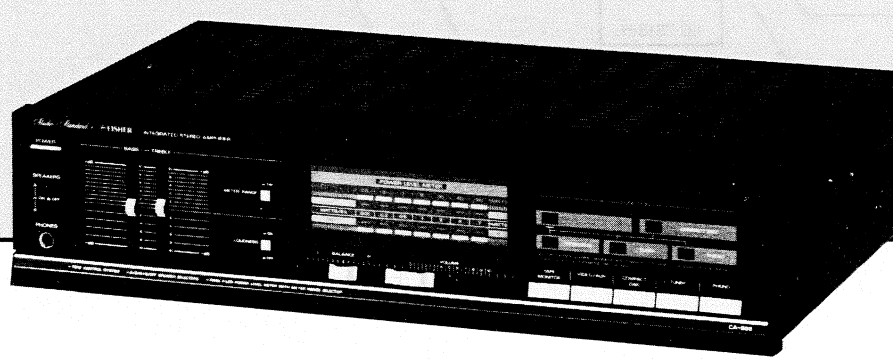

132 287 45

WM-16839

CONTENTS

Functional Block Diagram 2
Specifications 3
Cabinet & Chassis Exploded View 4,5
Parts List 6
Recommended Test Equipments 7
Harmonic Distortion Test 7
Power Amplifier Adjustment 8
Integrated Circuit Block Diagram 8,9
P.C.B.Assy Parts List 10,11,12,13,14
Printed Circuit Board (Bottom View) 14,15,16,17,18
Point to Point Wiring Diagram 19,20
Schematic Diagram 21,22
Semiconductor Lead Identification 23

FUNCTIONAL BLOCK DIAGRAM

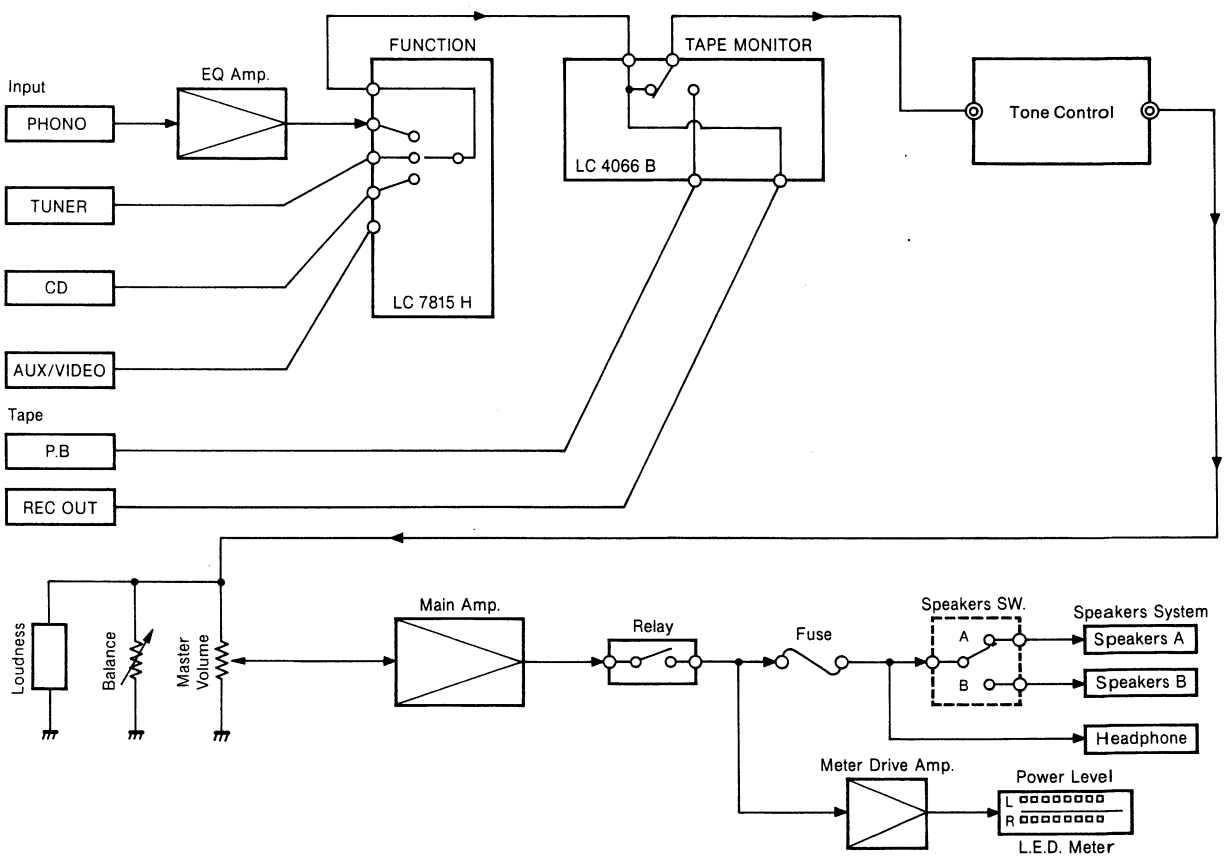

SPECIFICATIONS

AMPLIFIER		CA-866
POWER AMPLIFIER SECTION **Minimum RMS sine wave power per channel within stated bandwidth at no more than stated distortion and with 8-ohm load**		**100 Watts**
Power Bandwidth		**20 Hz – 20 kHz**
Total Harmonic Distortion		**0.05 %**
I.M. Distortion		0.05 %
Speaker Damping		> 20
PREAMPLIFIER SECTION Frequency Response		
	Phono (RIAA)	±1 dB
	Aux (20 Hz – 20 kHz)	±1 dB
Input Sensitivity and Impedance		
	Phono	2.5 mV/50 kΩ
	Tape Monitor	150 mV/50 kΩ
	Tuner/Auxiliary	150 mV/50 kΩ
Phono Max. Input Capability		
	Phono	125 mV
Tone Controls		
	Bass (100 Hz)	±10 dB
	Treble (10 kHz)	±10 dB
Loudness Contour (100 Hz/10 kHz)		+8 dB/+4 dB
Hum & Noise (IHF Short Circuit, A Network)		
	Phono	70 dB
	Tape Monitor	90 dB
	Tuner/Auxiliary	90 dB
GENERAL Power Requirements (50 Hz)		110 / 220 V AC
Power Consumption		480 Watts
Dimensions (W x D x H)		440 x 270 x 110 mm
Weight (approx.)		8.4 kg

Because its products are subject to continuous improvement, Fisher Corporation reserves the right to modify product designs and specifications without notice and without incurring any obligation.

CABINET & CHASSIS EXPLODED VIEW (1)

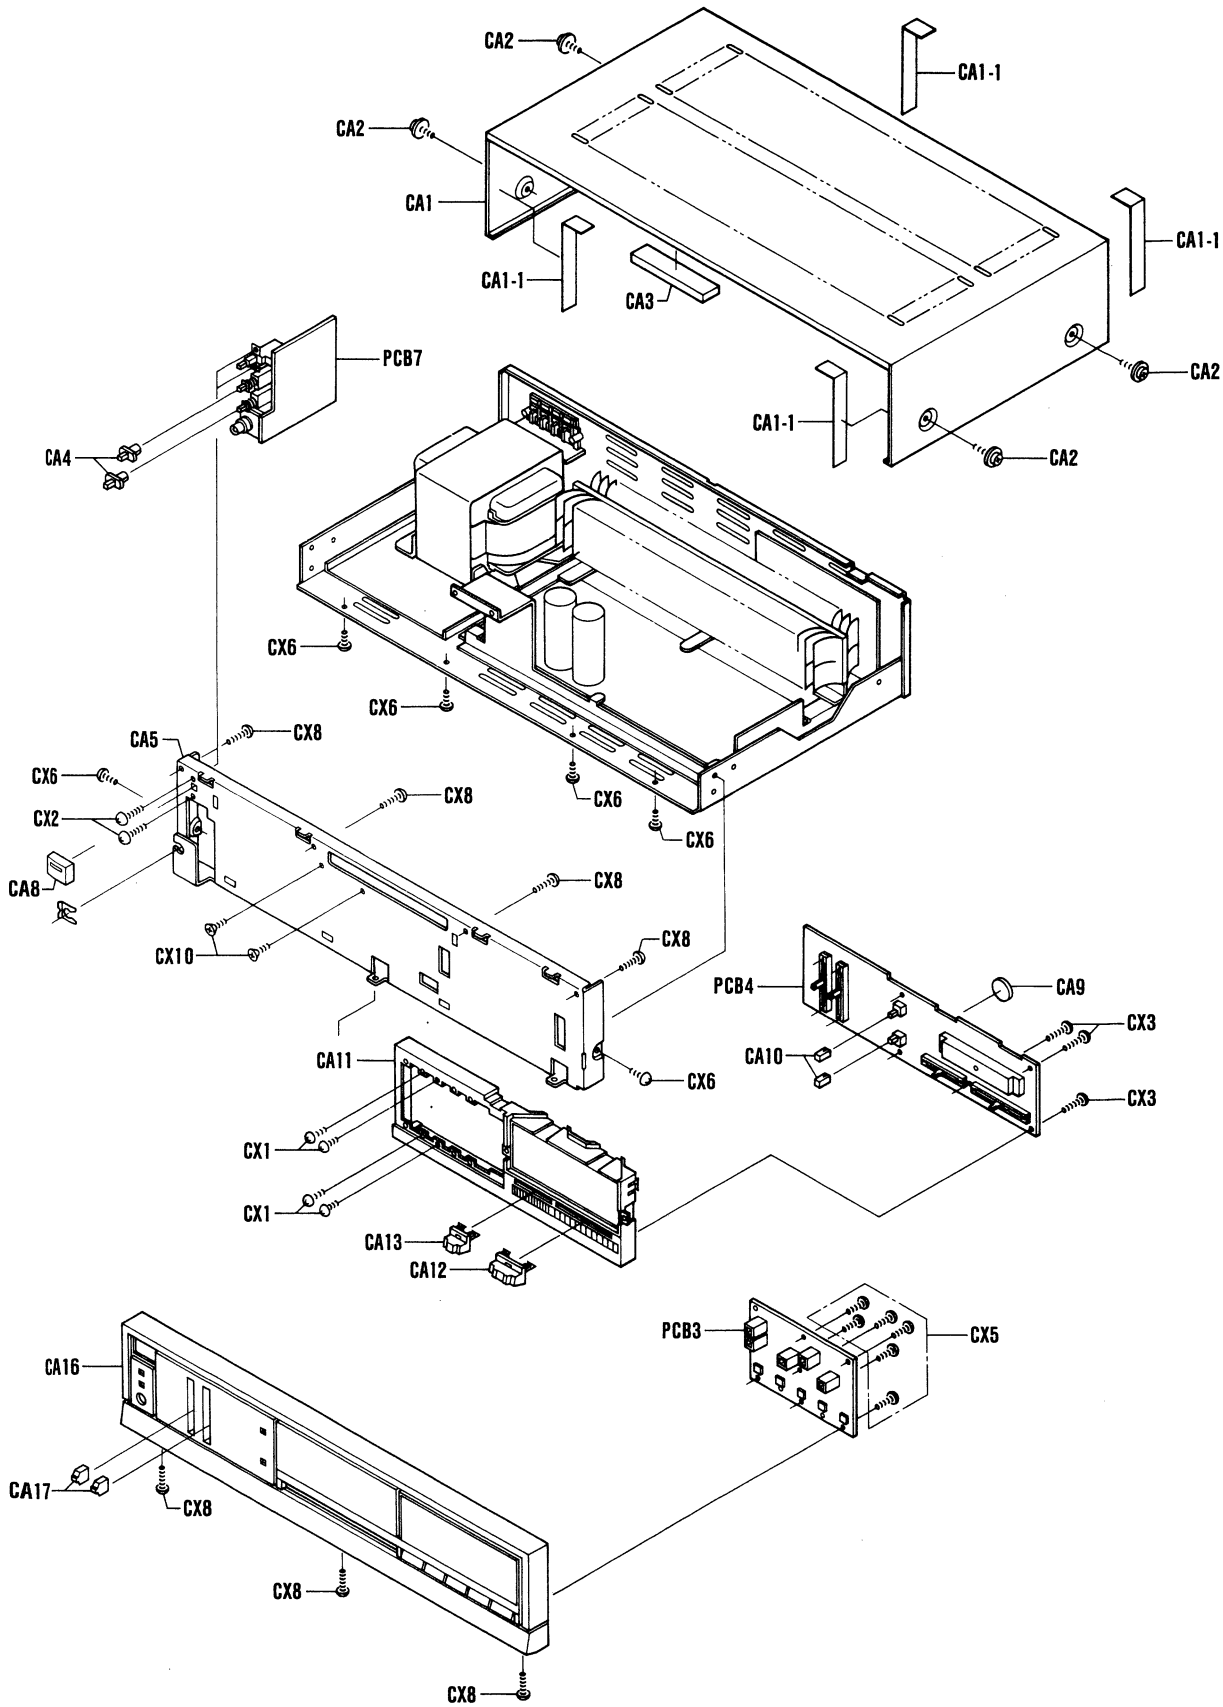

CABINET & CHASSIS EXPLODED VIEW (2)

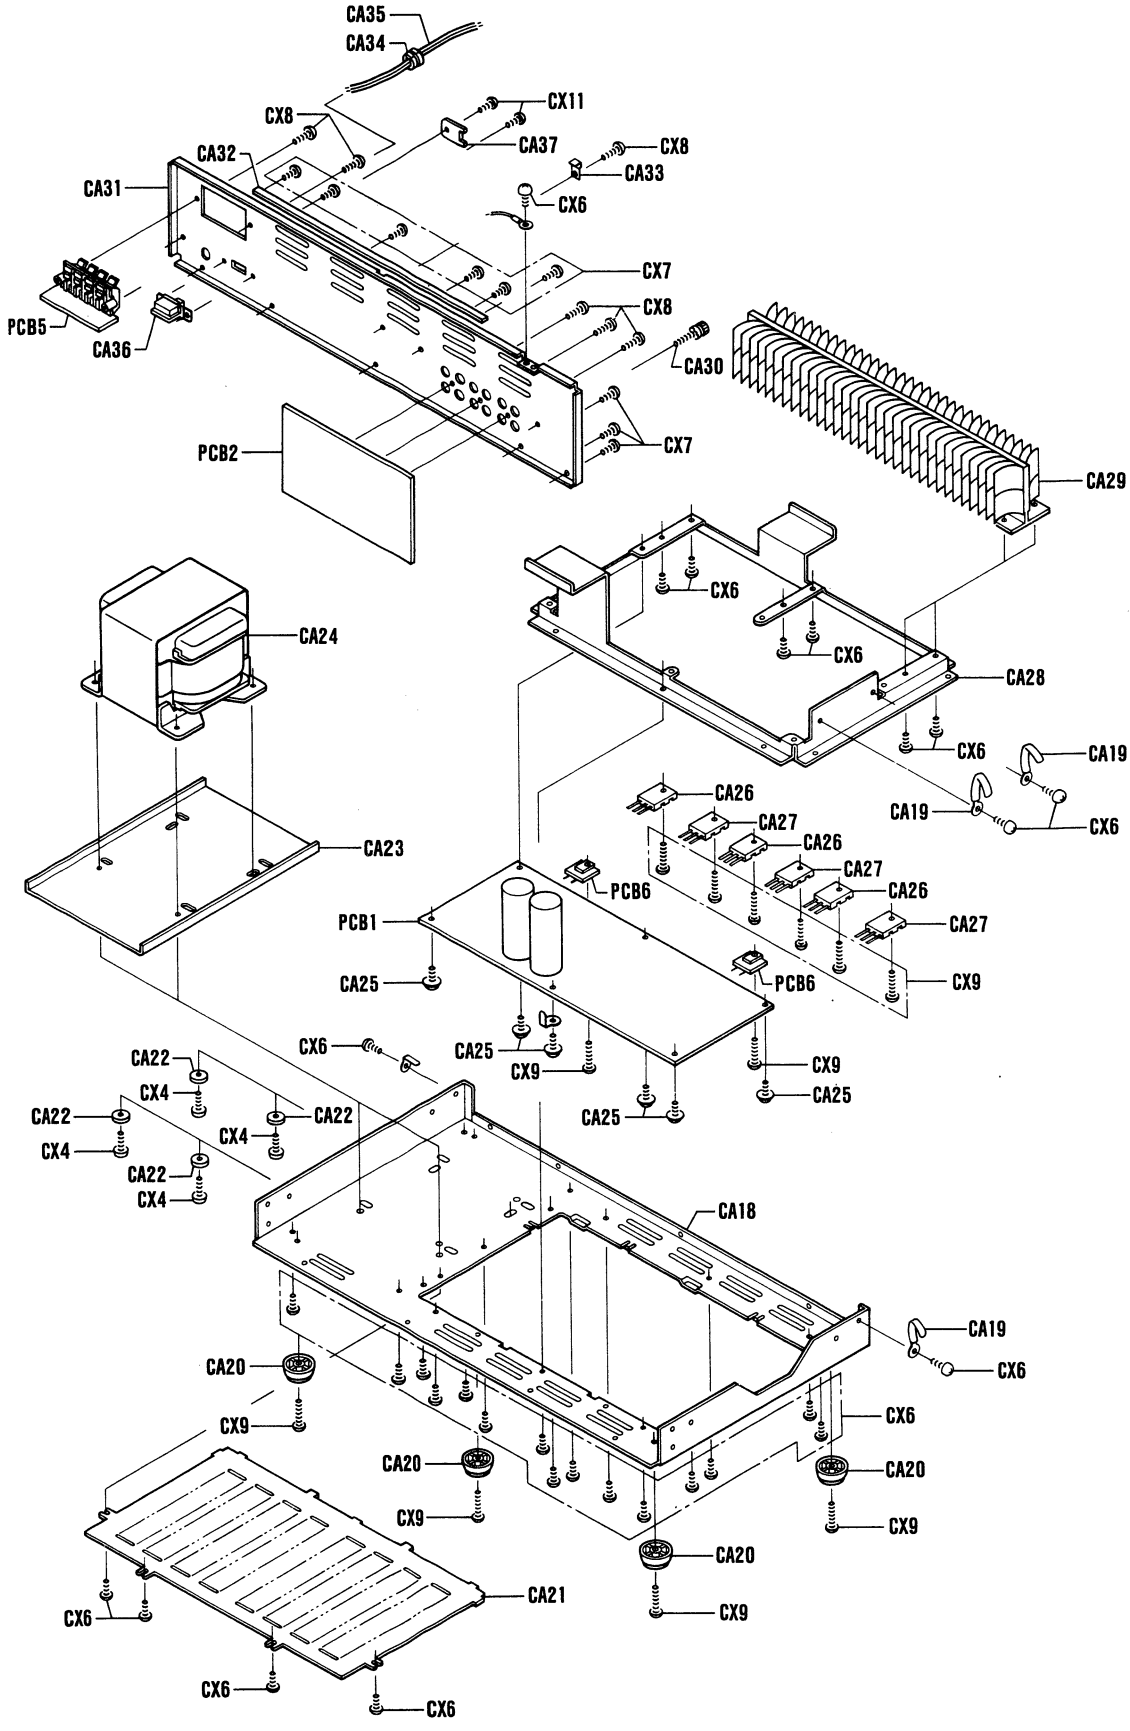

PARTS LIST

Ref. No.	Part No.	Description	Q'ty
	PACKING PARTS LIST		
	3-9415-10300	Bag Polyethylene	1
	131-6-3069-16350	Patching Sheet	1
	131-6-9459-00300	Rubber Band	1
	141-6-1139-86236	Outer Cor Carton	1
	141-6-1469-00400	Pad Top	1
	141-6-1469-04000	Case Styrofoam (Left)	1
	141-6-1469-04001	Case Styrofoam (Right)	1
	141-6-2519-22290	Sheet Polyethylene	1
	141-6-4559-03300	Serial No. Sheet	1
	ACCESSORIES PARTS LIST		
	131-6-2719-10401	Bag Fan	1
	142-6-4119-32895	Explanatory Booklet	1
	CABINET & CHASSIS PARTS LIST		
	4-2379-21520	Terminal Lug	2
	141-2-1219-03300	Serial No. Sheet	1
CA1	131-2-1410-33100	Cover	1
CA1-1	131-2-3202-13400	Metal Reinf	4
CA2	141-2-4219-38400	Screw, Bind Hd. Tapping-B Sems +M4.0x8	4
CA3	131-2-5205-33300	Cushion	1
CA4	131-2-1601-69601	Knob (Speaker Selector)	2
CA5	141-2-2149-24300	Panel Front	1
CA8	131-2-1601-91600	Knob Power	1
CA9	131-2-5205-33500	Cushion	1
CA10	131-2-1601-91700	Knob Push	2
CA11	141-0-3519-24401	Mount P.C.B. Assy	1
	141-2-3519-74300	Mount P.C.B.	1
	141-2-1449-65105	Screen LED	1
CA12	131-2-1701-91900	Knob Volume	1
CA13	131-2-1601-92000	Knob Balance	1
CA16	131-0-1016-44502	Panel Decorate Assy	1
	131-2-1205-28800	Decorate Plate Dial	1
	131-2-1601-91800	Knob Function	1
	141-2-1129-15801	Cabinet Front	1
	141-2-1449-61243	Plate Front	1
	141-2-1449-65006	Plate Decorate	1
	141-2-2899-43500	Adhesive Film	2
	141-2-2899-43600	Adhesive Film	2
CA17	141-2-1659-35900	Knob Slide	5
CA18	141-2-3119-25400	Chassis	1
CA19	131-0-3016-10400	Cramp Wire Assy	3
CA20	131-2-1801-14100	Leg	4
CA21	141-2-1259-08100	Plate Bottom	1
CA22	131-2-4203-84200	Washer, 4.2x12x1.0 Z	4
CA23	131-2-3101-99900	Metal Mount Trans	1
CA24	⚠ 4-2512-24121	Power Trans	1
CA25	131-2-4201-25201	Screw, Brazier Hd. Tapping-B, Sems +M3.0x8	6
CA26	4-2039-71961	Transistor, 2SA 1302 [Q115, Q215, Q505]	3
or	4-2039-72121	Transistor, 2SA 1301 [Q115, Q215, Q505]	3
CA27	4-2039-71971	Transistor, 2SC 3281 [Q114, Q214, Q506]	3
or	4-2039-72111	Transistor, 2SC 3280 [Q114, Q214, Q506]	3
CA28	141-2-3129-05800	Sub Chassis	1
CA29	141-2-3689-14300	Plate Heat Sink	1
CA30	131-2-4201-17800	Screw Ground	1
CA31	141-2-1219-34803	Panel Rear	1
CA32	241-2-5205-15800	Cushion	1
CA33	141-2-3159-03301	Braket Cover	1
CA34	131-2-6111-14200	Bushing (Power Cord)	1
CA35	⚠ 4-2432-00200	Power Cord	1
CA36	⚠ 4-2312-01020	Switch Slide (AC Selector) [SW411]	1
CA37	131-2-7104-00500	Plate Pad Switch	1
	P.C.B. ASSY PARTS LIST		
PCB1	141-0-1939-09162	Main P.C.B. Assy	1
PCB2	141-0-1939-09131	Input P.C.B. Assy	1
PCB3	141-0-1939-09140	Function P.C.B. Assy	1
PCB4	141-0-1939-09151	Tone Control P.C.B. Assy	1
PCB5	141-0-1939-09172	Speaker Terminal P.C.B. Assy	1
PCB6	141-0-1939-09180	Transistor P.C.B. Assy	2
PCB7	141-0-1939-09193	Switch P.C.B. Assy	1
	SCREW PARTS LIST		
CX1	101-3-1302-00311	Screw, Pan Hd. +M2.0x3	4
CX2	101-3-1303-00611	Screw, Pan Hd. +M3.0x6	2
CX3	143-3-1302-60611	Screw, Pan Hd. Tapping-B, +M2.6x6	3
CX4	143-3-1704-00811	Screw, Bind Hd. Tapping-B, +M4.0x8	4
CX5	143-3-1902-60611	Screw, Brazier Hd. Tapping-B, +M2.6x6	6
CX6	143-3-1903-00611	Screw, Brazier Hd. Tapping-B, +M3.0x6	36
CX7	143-3-1903-00618	Screw, Brazier Hd. Tapping-B, +M3.0x6	9
CX8	143-3-1903-00818	Screw, Brazier Hd. Tapping-B, +M3.0x8	13
CX9	143-3-1903-01011	Screw, Brazier Hd. Tapping-B, +M3.0x10	12
CX10	143-3-1203-00611	Screw, Flat Hd. Tapping-B, +M3.0x6	2
CX11	101-3-1303-00618	Screw, Pan Hd., +M3.0x6	2

NOTES:

1. Parts order must contain Model Number, Part Number and Description.
2. Ordering quantity of screws and resistors must be multiple of 10 pcs.

PRODUCT SAFETY NOTICE

Each precaution in this manual should be followed during servicing. Components identified with the IEC symbol ⚠ in the parts list and the schematic diagram designate components in which safety can be of special significance. When replacing a component identified with ⚠, use only the replacement parts designated, or parts with the same ratings of resistance, wattage or voltage that are designated in the parts list in this manual. Leakage-current or resistance measurements must be made to determine that exposed parts are acceptably insulated from the supply circuit before returning the product to the customer.

RECOMMENDED TEST EQUIPMENTS

The following test equipments are recommended to completely test and align the Amplifier:

- Line Voltage Isolation Transformer
- AC DC Multimeter
- Accurately Calibrated AC Voltmeter
- Oscilloscope (Flat to 100 kHz Minimum)
- Low-Distortion Audio Sine-Wave Generator
- Harmonic Distortion Analyzer
- Two (2) Load Resistors 8-ohms, 250 Watts (Minimum Rating)

HARMONIC DISTORTION TEST

CAUTION: Limit the following tests to no more than ten minutes each. Use 8-ohm resistors, with a minimum power rating of 250 watts when connecting a load across the SPEAKERS terminal.

CONTROL SETTINGS:

Unplug the AC power cord and set the front panel controls as follows:

- TONE control to center position.
- BALANCE control to center position.
- POWER switch to OFF
- SPEAKERS switch to OFF
- FUNCTION switch to AUX/VIDEO
- LOUDNESS switch to OFF
- VOLUME control to MINIMUM position
- LEFT CHANNEL DRIVEN

ONE CHANNEL DRIVEN:

1) Connect a low distortion audio generator to LEFT AUX IN jack. Set generator frequency to 1 kHz and output to minimum.

2) Connect an 8-ohm load resistor between SPEAKERS SYSTEM-A LEFT and COM terminals. Connect a Harmonic Distortion Analyzer and an AC VTVM in parallel across the 8-ohm load.

3) Connect the AC power cord and set SPEAKERS switch to ON position. Turn VOLUME control to MAX.

4) Increase generator output for 100 Watts RMS (28.2 volts across the 8-ohm load). Harmonic Distortion Analyzer should measure 0.05 % distortion or less.

5) Repeat steps 1 through 4 for RIGHT CHANNEL.

BOTH CHANNELS DRIVEN

Connect 8-ohm load resistors across LEFT and RIGHT SPEAKERS SYSTEM-A terminals. Adjust generator output and "VOLUME" control for 100 watts at Left and Right Channels (28.2 volts across the 8-ohm loads). Harmonic Distortion Analyzer should measure 0.05 % distortion or less at each channel.

CAUTION: This precision high-fidelity instrument should be serviced only by qualified personnel, trained in the repair of transistor equipment and printed circuitry.

POWER AMPLIFIER ADJUSTMENT

BEFORE ADJUSTMENT

Unplug the AC power cord and set the front panel controls as follows:

- Power switch to the OFF position.
- Set the SPEAKERS switch to the OFF position.
- Turn the MASTER VOLUME control to the position marked 0 (minimum).
- IDLING CURRENT ADJUSTMENT VR101/VR201 (on the Main P.C.Board) setting to mechanical center position.
- Connect the AC power cord and Power switch to the ON position.

IDLING CURRENT ADJUSTMENT

This adjustment is very sensitive to changes in ambient temperature. Allow set to operate for 5 minutes before attempting this adjustment.

LEFT AMPLIFIER

1) Connect the DC VTVM between Pins No.21 and No.22 on the Main P.C.Board.
2) Adjust the VR101 for an indication of 7mV on the DC VTVM.

RIGHT AMPLIFIER

1) Connect the DC VTVM between Pins No.23 and No.24 on the Main P.C.Board.
2) Adjust the VR201 for an indication of 7mV on the DC VTVM.

INTEGRATED CIRCUIT BLOCK DIAGRAM

FUNCTION ANALOG SWITCH IC LC 7815 H

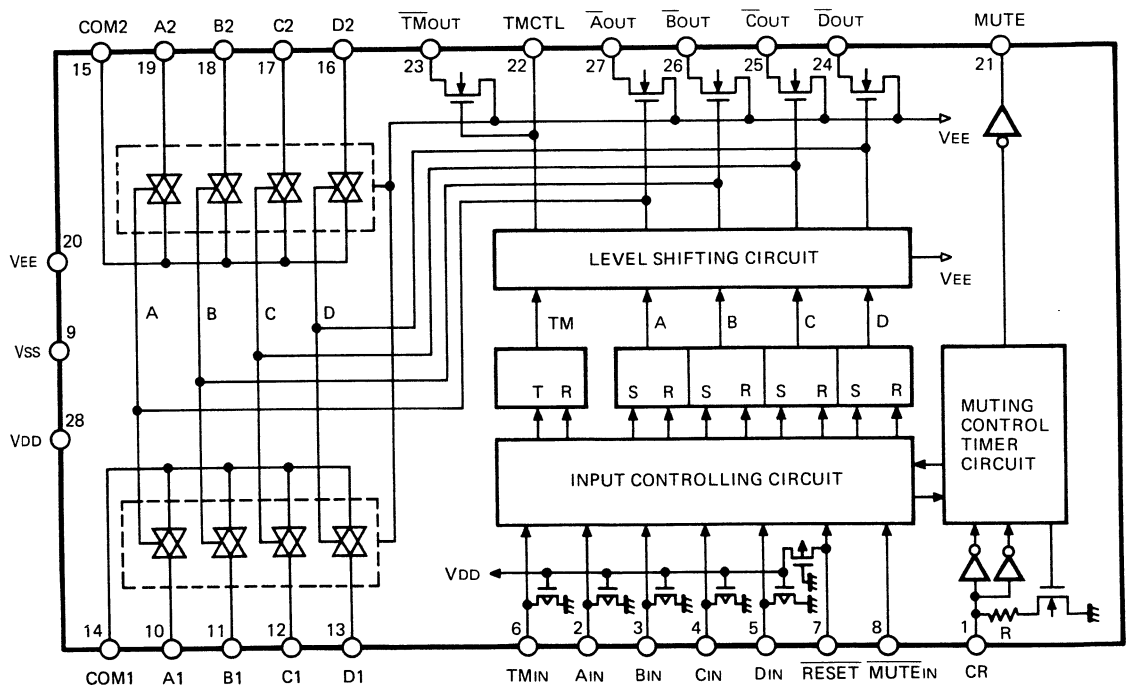

INTEGRATED CIRCUIT BLOCK DIAGRAM (Continued)

TAPE INPUT ANALOG SWITCH IC LC 4066 B

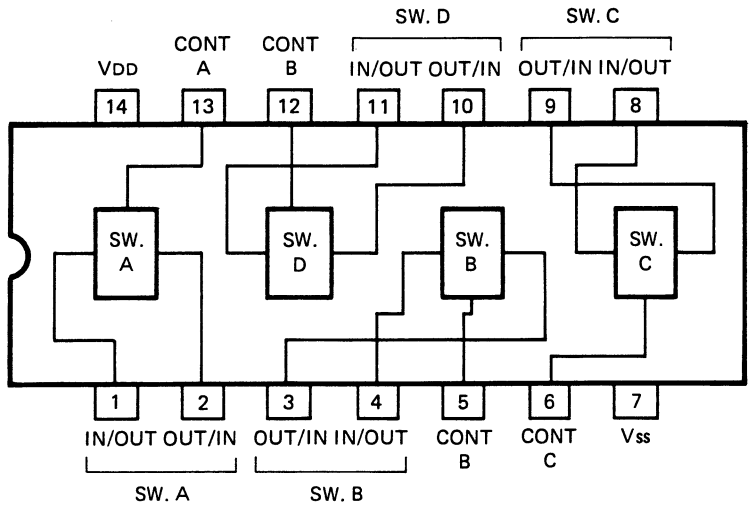

PHONO / GRAPHIC EQUALIZER AMP IC LA 6458 S

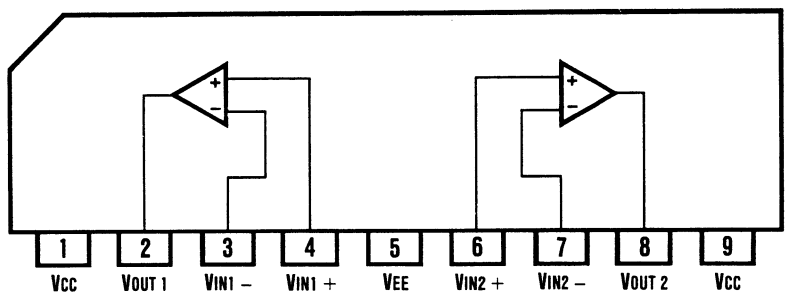

LED METER DRIVE AMP IC IR 2E19

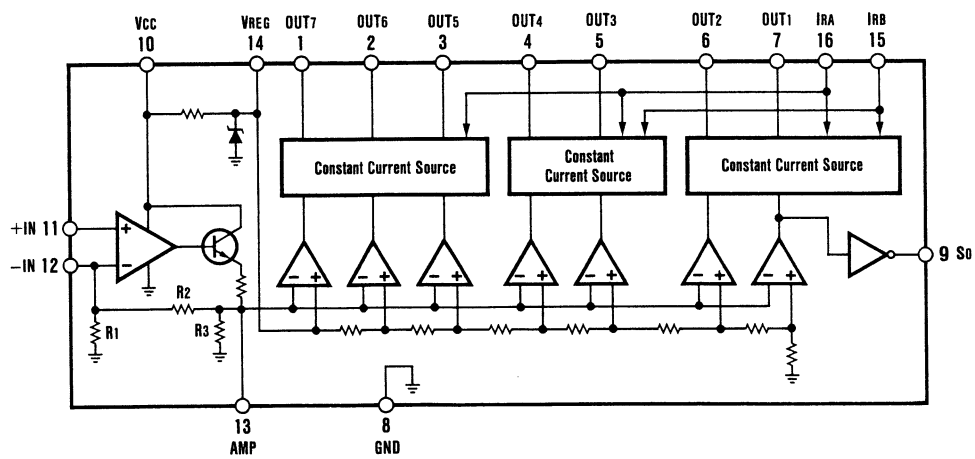

P.C.BOARD PARTS LIST

Ref. No.	Part No.	Description			Q'ty
	MAIN P.C.B. ASSY				
PCB1	141-0-1939-09162	Main P.C.B. Assy			1
	4-2262-22070	Main P.C.B.			1
	4-2329-70440	Relay			1
	⚠ 4-2342-00340	Fuse F5.0A			2
	⚠ 4-2349-20580	Fuse T3.15A			2
	⚠ 4-2349-21570	Fuse T6.3A			2
	4-2352-00200	Fuse Holder			12
L101	4-2552-00650	AF Coil			1
L201	4-2552-00650	AF Coil			1
VR101	4-2222-01450	Potentiometer (B-200Ω)			1
VR201	4-2222-01450	Potentiometer (B-200Ω)			1
D	4-2369-73130	Connector 3P			1
E	4-2369-73410	Connector 7P			1
	111-2-6220-11100	Wire Wrap Terminal			15
	131-2-6201-29800	Heat Sink (For Q301,Q302)			2
	131-2-7103-50801	Label Fuse			1
	CAPACITORS				
C140	CD4-7-5250-0001V	Electrolytic	4.7μF	25V	1
C141	CC2-2-1500-KE00R	Ceramic	220pF	50V ±10%	1
C142	CC1-0-1500-KD00C	Ceramic	100pF	50V ±10%	1
C143	CC1-0-1500-KD00C	Ceramic	100pF	50V ±10%	1
C144	CC8-0-A500-DD00C	Ceramic	8pF	50V ±0.5%	1
C145	CC8-0-A500-DD00C	Ceramic	8pF	50V ±0.5%	1
C146	CC2-2-1500-KE00R	Ceramic	220pF	50V ±10%	1
C147	CM1-0-4500-J00TV	Mylar	0.1μF	50V ±5%	1
C148	CD4-7-6101-0001V	Electrolytic	47μF	100V	1
C149	4-2239-71190	Capacitor	27pF	500V ±10%	1
C150	4-2239-72020	Ceramic	3pF	500V ±0.5pF	1
C151	CD2-2-763A-0001V	Electrolytic	220μF	6.3V	1
C152	4-2239-72120	Ceramic	220pF	500V ±10%	1
C153	CD1-0-5500-0001V	Electrolytic	1μF	50V	1
C154	4-2239-71120	Capacitor	18pF	500V ±10%	1
C155	4-2239-72120	Ceramic	220pF	500V ±10%	1
C156	CD4-7-6101-0001V	Electrolytic	47μF	100V	1
C157	CM3-9-3500-K00SV	Mylar	0.039μF	50V ±10%	1
C240	CD4-7-5250-0001V	Electrolytic	4.7μF	25V	1
C241	CC2-2-1500-KE00R	Ceramic	220pF	50V ±10%	1
C242	CC1-0-1500-KD00C	Ceramic	100pF	50V ±10%	1
C243	CC1-0-1500-KD00C	Ceramic	100pF	50V ±10%	1
C244	CC8-0-A500-DD00C	Ceramic	8pF	50V ±0.5%	1
C245	CC8-0-A500-DD00C	Ceramic	8pF	50V ±0.5%	1
C246	CC2-2-1500-KE00R	Ceramic	220pF	50V ±10%	1
C247	CM1-0-4500-J00TV	Mylar	0.1μF	50V ±5%	1
C248	CD4-7-6101-0001V	Electrolytic	47μF	100V	1
C249	4-2239-71190	Capacitor	27pF	500V ±10%	1
C250	4-2239-72020	Ceramic	3pF	500V ±0.5pF	1
C251	CD2-2-763A-0001V	Electrolytic	220μF	6.3V	1
C252	4-2239-72120	Ceramic	220pF	500V ±10%	1
C253	CD1-0-5500-0001V	Electrolytic	1μF	50V	1
C254	4-2239-71120	Capacitor	18pF	500V ±10%	1
C255	4-2239-72120	Ceramic	220pF	500V ±10%	1
C256	CD4-7-6101-0001V	Electrolytic	47μF	100V	1
C257	CM3-9-3500-K00SV	Mylar	0.039μF	50V ±10%	1
C302	CC4-7-3151-ZG00C	Ceramic	0.047μF	150V +80,-20%	1
C303	CC4-7-3151-ZG00C	Ceramic	0.047μF	150V +80,-20%	1
C304	CC4-7-3151-ZG00C	Ceramic	0.047μF	150V +80,-20%	1
C305	CC4-7-3151-ZG00C	Ceramic	0.047μF	150V +80,-20%	1
C306	4-2239-72180	Electrolytic	6800μF	72V ±20%	1
C307	4-2239-72180	Electrolytic	6800μF	72V ±20%	1
C308	CD1-0-6250-0001V	Electrolytic	10μF	25V	1
C309	CC4-7-3151-ZG00C	Ceramic	0.047μF	150V +80,-20%	1
C310	CC4-7-3151-ZG00C	Ceramic	0.047μF	150V +80,-20%	1

Ref. No.	Part No.	Description			Q'ty
C311	CC4-7-3151-ZG00C	Ceramic	0.047μF	150V +80,-20%	1
C312	CC4-7-3151-ZG00C	Ceramic	0.047μF	150V +80,-20%	1
C313	4-2239-72190	Electrolytic	4700μF	40V ±20%	1
C314	4-2239-72190	Electrolytic	4700μF	40V ±20%	1
C315	CD1-0-7250-0001V	Electrolytic	100μF	25V	1
C316	CD1-0-7250-0001V	Electrolytic	100μF	25V	1
C317	CD1-0-6250-0001V	Electrolytic	10μF	25V	1
C318	CD1-0-6250-0001V	Electrolytic	10μF	25V	1
C328	CD2-2-5500-0001V	Electrolytic	2.2μF	50V	1
C408	CD2-2-763A-0001V	Electrolytic	220μF	6.3V	1
C503	CC1-2-1500-JD00R	Ceramic	120pF	50V ±5%	1
C504	CC1-2-1500-JD00R	Ceramic	120pF	50V ±5%	1
C505	CC2-2-1500-KD00C	Ceramic	220pF	50V ±10%	1
C506	CC2-2-1500-KD00C	Ceramic	220pF	50V ±10%	1
	SEMICONDUCTORS				
D101	205-5-9040-44210	Diode, DS 442			1
D102	205-5-9040-44210	Diode, DS 442			1
D201	205-5-9040-44210	Diode, DS 442			1
D202	205-5-9040-44210	Diode, DS 442			1
D301	212-5-5990-03020	Stack Diode, 30 DC 1S			1
D302	212-5-5990-03010	Stack Diode, 30 DC 1RS			1
D303	202-5-3210-18011	Zener Diode, GZA 18 X			1
D304	4-2029-73840	Diode, 30D 2			1
D305	4-2029-73840	Diode, 30D 2			1
D306	4-2029-73840	Diode, 30D 2			1
D307	4-2029-73840	Diode, 30D 2			1
D308	202-5-3210-18011	Zener Diode, GZA 18 X			1
D309	202-5-3210-18011	Zener Diode, GZA 18 X			1
D310	202-5-3210-05112	Zener Diode, GZA 5.1 Y			1
D313	202-5-0220-01010	Diode, DSF 10 C			1
or	4-2029-73870	Diode, 11E 2			1
D410	205-5-9040-44210	Diode, DS 442			1
D411	202-5-0220-01010	Diode, DSF 10 C			1
or	4-2029-73870	Diode, 11E 2			1
D501	202-5-9600-44610	Diode, DS 446			1
D502	202-5-9600-44610	Diode, DS 446			1
D503	202-5-9600-44610	Diode, DS 446			1
D504	202-5-9600-44610	Diode, DS 446			1
D505	4-2029-73840	Diode, 30D 2			1
D506	4-2029-73840	Diode, 30D 2			1
Q106	203-5-4921-01270	Transistor, 2SD 1012			1
or	203-5-4570-73470	Transistor, 2SD 734			1
Q107	203-5-5393-06560	Transistor, 2SC 3065			1
Q108	203-5-5613-06470	Transistor, 2SC 3064			1
Q109	203-5-6931-20985	Transistor, 2SA 1209			1
Q110	203-5-5632-91185	Transistor, 2SC 2911			1
Q111	203-5-5143-11782	Transistor, 2SC 3117			1
or	203-5-8122-34450	Transistor, 2SC 2344			1
Q112	203-5-4711-24982	Transistor, 2SA 1249			1
or	203-5-8631-01150	Transistor, 2SA 1011			1
Q206	203-5-4921-01270	Transistor, 2SD 1012			1
or	203-5-4570-73470	Transistor, 2SD 734			1
Q207	203-5-5393-06560	Transistor, 2SC 3065			1
Q208	203-5-5613-06470	Transistor, 2SC 3064			1
Q209	203-5-6931-20985	Transistor, 2SA 1209			1
Q210	203-5-5632-91185	Transistor, 2SC 2911			1
Q211	203-5-5143-11782	Transistor, 2SC 3117			1
or	203-5-8122-34450	Transistor, 2SC 2344			1
Q212	203-5-4711-24982	Transistor, 2SA 1249			1
or	203-5-8631-01150	Transistor, 2SA 1011			1
Q301	203-5-7330-61261	Transistor, 2SD 612			1
Q302	203-5-7320-63261	Transistor, 2SB 632			1
Q401	203-5-7230-60870	Transistor, 2SA 608			1

P.C.BOARD PARTS LIST (Continued)

Ref. No.	Part No.	Description				Q'ty
or	4-2039-72212	Transistor, 2SA 1115				1
Q402	203-5-7230-60870	Transistor, 2SA 608				1
or	4-2039-72212	Transistor, 2SA 1115				1
Q501	4-2039-72202	Transistor, 2SC 2603				1
or	203-5-7252-27460	Transistor, 2SC 2274				1
Q502	4-2039-72212	Transistor, 2SA 1115				1
or	203-5-6820-98460	Transistor, 2SA 984				1
Q503	203-5-4910-63160	Transistor, 2SB 631				1
Q504	203-5-4900-60060	Transistor, 2SD 600				1
	RESISTORS					
R146	RD1-2-2251-JM000	Carbon	1.2kΩ	1/4W	±5%	1
R147	RD3-3-2251-JM000	Carbon	3.3kΩ	1/4W	±5%	1
R148	RD6-8-3251-JM000	Carbon	68kΩ	1/4W	±5%	1
R149	RD8-2-2251-JM000	Carbon	8.2kΩ	1/4W	±5%	1
R150	RD2-7-3251-JM000	Carbon	27kΩ	1/4W	±5%	1
R151	RD1-2-2251-JM000	Carbon	1.2kΩ	1/4W	±5%	1
R152	RF1-2-2251-JK000	Fuse	1.2kΩ	1/4W	±5%	1
R153	RD2-7-3251-JM000	Carbon	27kΩ	1/4W	±5%	1
R154	RD1-0-2251-JM000	Carbon	1kΩ	1/4W	±5%	1
R155	RD1-5-3251-JM000	Carbon	15kΩ	1/4W	±5%	1
R156	RF8-2-0251-JK000	Fuse	82Ω	1/4W	±5%	1
R157	RF4-7-0251-JK000	Fuse	47Ω	1/4W	±5%	1
R158	RF4-7-0251-JK000	Fuse	47Ω	1/4W	±5%	1
R159	RD6-8-3251-JM000	Carbon	68kΩ	1/4W	±5%	1
R160	RD4-7-1251-JM000	Carbon	470Ω	1/4W	±5%	1
R161	RD4-7-0251-JM000	Carbon	47Ω	1/4W	±5%	1
R162	RD3-3-3251-JM000	Carbon	33kΩ	1/4W	±5%	1
R163	RD8-2-0251-JM000	Carbon	82Ω	1/4W	±5%	1
R164	RF1-0-0251-JK000	Fuse	10Ω	1/4W	±5%	1
R165	RF2-2-A251-JK000	Fuse	2.2Ω	1/4W	±5%	1
R166	RF3-3-1501-JZ000	Fuse	330Ω	1/2W	±5%	1
R167	RF2-2-A251-JK000	Fuse	2.2Ω	1/4W	±5%	1
R168	4-2219-70370	Cement	0.22Ωx2	5W	±10%	1
R169	RD4-7-A251-JM000	Carbon	4.7Ω	1/4W	±5%	1
R170	RH1-0-0102-JZ003	Metal	10Ω	1W	±5%	1
R171	RD1-5-4251-JM000	Carbon	150kΩ	1/4W	±5%	1
R246	RD1-2-2251-JM000	Carbon	1.2kΩ	1/4W	±5%	1
R247	RD3-3-2251-JM000	Carbon	3.3kΩ	1/4W	±5%	1
R248	RD6-8-3251-JM000	Carbon	68kΩ	1/4W	±5%	1
R249	RD8-2-2251-JM000	Carbon	8.2kΩ	1/4W	±5%	1
R250	RD2-7-3251-JM000	Carbon	27kΩ	1/4W	±5%	1
R251	RD1-2-2251-JM000	Carbon	1.2kΩ	1/4W	±5%	1
R252	RF1-2-2251-JK000	Fuse	1.2kΩ	1/4W	±5%	1
R253	RD2-7-3251-JM000	Carbon	27kΩ	1/4W	±5%	1
R254	RD1-0-2251-JM000	Carbon	1kΩ	1/4W	±5%	1
R255	RD1-5-3251-JM000	Carbon	15kΩ	1/4W	±5%	1
R256	RF8-2-0251-JK000	Fuse	82Ω	1/4W	±5%	1
R257	RF4-7-0251-JK000	Fuse	47Ω	1/4W	±5%	1
R258	RF4-7-0251-JK000	Fuse	47Ω	1/4W	±5%	1
R259	RD6-8-3251-JM000	Carbon	68kΩ	1/4W	±5%	1
R260	RD4-7-1251-JM000	Carbon	470Ω	1/4W	±5%	1
R261	RD4-7-0251-JM000	Carbon	47Ω	1/4W	±5%	1
R262	RD3-3-3251-JM000	Carbon	33kΩ	1/4W	±5%	1
R263	RD8-2-0251-JM000	Carbon	82Ω	1/4W	±5%	1
R264	RF1-0-0251-JK000	Fuse	10Ω	1/4W	±5%	1
R265	RF2-2-A251-JK000	Fuse	2.2Ω	1/4W	±5%	1
R266	RF3-3-1501-JZ000	Fuse	330Ω	1/2W	±5%	1
R267	RF2-2-A251-JK000	Fuse	2.2Ω	1/4W	±5%	1
R268	4-2219-70370	Cement	0.22Ωx2	5W	±10%	1
R269	RD4-7-A251-JM000	Carbon	4.7Ω	1/4W	±5%	1
R270	RH1-0-0102-JZ003	Metal	10Ω	1W	±5%	1
R271	RD1-5-4251-JM000	Carbon	150kΩ	1/4W	±5%	1
R302	RH4-7-2102-JZ003	Metal	4.7kΩ	1W	±5%	1
R303	RH2-2-0102-JZ003	Metal	22Ω	1W	±5%	1
R304	RH2-2-0102-JZ003	Metal	22Ω	1W	±5%	1
R305	RD1-0-2251-JM000	Carbon	1kΩ	1/4W	±5%	1
R306	RD1-0-2251-JM000	Carbon	1kΩ	1/4W	±5%	1
R307	RD3-3-1251-JM000	Carbon	330Ω	1/4W	±5%	1
R308	RD3-3-1251-JM000	Carbon	330Ω	1/4W	±5%	1
R309	RF2-2-0251-JK000	Fuse	22Ω	1/4W	±5%	1
R310	RF2-2-0251-JK000	Fuse	22Ω	1/4W	±5%	1
R311	RF2-7-0501-JZ000	Fuse	27Ω	1/2W	±5%	1
R325	RD2-2-3251-JM000	Carbon	22kΩ	1/4W	±5%	1
R328	RD4-7-2251-JM000	Carbon	4.7kΩ	1/4W	±5%	1
R405	RD6-8-1251-JM000	Carbon	680Ω	1/4W	±5%	1
R406	RD4-7-4251-JM000	Carbon	470kΩ	1/4W	±5%	1
R407	RD2-2-3251-JM000	Carbon	22kΩ	1/4W	±5%	1
R409	RF3-9-1501-JZ000	Fuse	390Ω	1/2W	±5%	1
R501	RD1-0-3251-JM000	Carbon	10kΩ	1/4W	±5%	1
R502	RD1-0-3251-JM000	Carbon	10kΩ	1/4W	±5%	1
R503	RD4-7-4251-JM000	Carbon	470kΩ	1/4W	±5%	1
R504	RD4-7-4251-JM000	Carbon	470kΩ	1/4W	±5%	1
R505	RD6-8-1251-JM000	Carbon	680Ω	1/4W	±5%	1
R506	RD6-8-1251-JM000	Carbon	680Ω	1/4W	±5%	1
R507	RD1-2-2251-JM000	Carbon	1.2kΩ	1/4W	±5%	1
R508	RD1-2-2251-JM000	Carbon	1.2kΩ	1/4W	±5%	1
R509	RD1-8-2251-JM000	Carbon	1.8kΩ	1/4W	±5%	1
R510	RD1-8-2251-JM000	Carbon	1.8kΩ	1/4W	±5%	1
R511	RD5-6-2251-JM000	Carbon	5.6kΩ	1/4W	±5%	1
R512	RD5-6-2251-JM000	Carbon	5.6kΩ	1/4W	±5%	1
R513	RH2-2-0102-JZ003	Metal	22Ω	1W	±5%	1
R514	RH2-2-0102-JZ003	Metal	22Ω	1W	±5%	1

INPUT P.C.B. ASSY

PCB2	141-0-1939-09131	Input P.C.B. Assy	1
	4-2262-22040	Input P.C.B.	1
	4-2359-78190	Pin Jack 4P (Tape)	1
	4-2359-78190	Pin Jack 4P (AUX/Video, CD)	1
	4-2359-78190	Pin Jack 4P (Tuner, Phono)	1
A	4-2369-73675	Plug 6P	1
B	4-2369-73674	Plug 5P	1
C	4-2369-73675	Plug 6P	1

	CAPACITORS					
C101	CC3-3-1500-KD00C	Ceramic	330pF	50V	±10%	1
C102	CC3-3-1500-KD00C	Ceramic	330pF	50V	±10%	1
C103	CD4-7-5250-0001V	Electrolytic	4.7μF	25V		1
C105	CC3-3-1500-KD00C	Ceramic	330pF	50V	±10%	1
C106	CD4-7-6160-0001V	Electrolytic	47μF	16V		1
C107	CM1-8-3500-K00SV	Mylar	0.018μF	50V	±10%	1
C108	CM4-7-2500-K00SV	Mylar	0.0047μF	50V	±10%	1
C109	CD4-7-5250-0001V	Electrolytic	4.7μF	25V		1
C110	CC2-2-1500-KE01R	Ceramic	220pF	50V	±10%	1
C201	CC3-3-1500-KD00C	Ceramic	330pF	50V	±10%	1
C202	CC3-3-1500-KD00C	Ceramic	330pF	50V	±10%	1
C203	CD4-7-5250-0001V	Electrolytic	4.7μF	25V		1
C205	CC3-3-1500-KD00C	Ceramic	330pF	50V	±10%	1
C206	CD4-7-6160-0001V	Electrolytic	47μF	16V		1
C207	CM1-8-3500-K00SV	Mylar	0.018μF	50V	±10%	1
C208	CM4-7-2500-K00SV	Mylar	0.0047μF	50V	±10%	1
C209	CD4-7-5250-0001V	Electrolytic	4.7μF	25V		1
C210	CC2-2-1500-KE01R	Ceramic	220pF	50V	±10%	1
C321	CD4-7-6160-0001V	Electrolytic	47μF	16V		1
C322	CD4-7-6160-0001V	Electrolytic	47μF	16V		1
C323	CD4-7-6250-0006V	Electrolytic	47μF	25V		1
C324	CD4-7-6250-0006V	Electrolytic	47μF	25V		1

P.C.BOARD PARTS LIST (Continued)

Ref. No.	Part No.	Description				Q'ty
C325	CD1-0-6250-0001V	Electrolytic	10μF	25V		1
C326	CD2-2-5500-0001V	Electrolytic	2.2μF	50V		1
C401	CD1-0-8160-0001V	Electrolytic	1000μF	16V		1
C402	CD1-0-4500-0001V	Electrolytic	0.1μF	50V		1
C409	CC4-7-3500-ZG00C	Ceramic	0.047μF	50V	+80,-20%	1
	SEMICONDUCTORS					
D401	202-5-3160-00110	Diode, GMA 01				1
D402	202-5-3160-00110	Diode, GMA 01				1
D403	202-5-3160-00110	Diode, GMA 01				1
D404	202-5-3160-00110	Diode, GMA 01				1
IC401	4-2069-74450	IC, M 5218 L-R				1
IC402	206-5-8897-81520	IC, LC 7815 H				1
IC403	206-5-8144-06610	IC, LC 4066 BH				1
	RESISTORS					
R101	RD1-0-2161-JH000	Carbon	1kΩ	1/6W	±5%	1
R102	RD1-0-4161-JH000	Carbon	100kΩ	1/6W	±5%	1
R103	RD1-0-4161-JH000	Carbon	100kΩ	1/6W	±5%	1
R104	RD3-3-1161-JH000	Carbon	330Ω	1/6W	±5%	1
R105	RD2-2-4161-JH000	Carbon	220kΩ	1/6W	±5%	1
R106	RD1-5-3161-JH000	Carbon	15kΩ	1/6W	±5%	1
R107	RD1-0-4161-JH000	Carbon	100kΩ	1/6W	±5%	1
R108	RD1-0-2161-JH000	Carbon	1kΩ	1/6W	±5%	1
R109	RD1-0-2161-JH000	Carbon	1kΩ	1/6W	±5%	1
R110	RD1-8-4161-JH000	Carbon	180kΩ	1/6W	±5%	1
R111	RD1-0-2161-JH000	Carbon	1kΩ	1/6W	±5%	1
R112	RD1-8-4161-JH000	Carbon	180kΩ	1/6W	±5%	1
R113	RD1-0-2161-JH000	Carbon	1kΩ	1/6W	±5%	1
R114	RD1-8-4161-JH000	Carbon	180kΩ	1/6W	±5%	1
R115	RD1-0-2161-JH000	Carbon	1kΩ	1/6W	±5%	1
R116	RD1-8-4161-JH000	Carbon	180kΩ	1/6W	±5%	1
R117	RD1-0-2161-JH000	Carbon	1kΩ	1/6W	±5%	1
R118	RD8-2-3161-JH000	Carbon	82kΩ	1/6W	±5%	1
R201	RD1-0-2161-JH000	Carbon	1kΩ	1/6W	±5%	1
R202	RD1-0-4161-JH000	Carbon	100kΩ	1/6W	±5%	1
R203	RD1-0-4161-JH000	Carbon	100kΩ	1/6W	±5%	1
R204	RD3-3-1161-JH000	Carbon	330Ω	1/6W	±5%	1
R205	RD2-2-4161-JH000	Carbon	220kΩ	1/6W	±5%	1
R206	RD1-5-3161-JH000	Carbon	15kΩ	1/6W	±5%	1
R207	RD1-0-4161-JH000	Carbon	100kΩ	1/6W	±5%	1
R208	RD1-0-2161-JH000	Carbon	1kΩ	1/6W	±5%	1
R209	RD1-0-2161-JH000	Carbon	1kΩ	1/6W	±5%	1
R210	RD1-8-4161-JH000	Carbon	180kΩ	1/6W	±5%	1
R211	RD1-0-2161-JH000	Carbon	1kΩ	1/6W	±5%	1
R212	RD1-8-4161-JH000	Carbon	180kΩ	1/6W	±5%	1
R213	RD1-0-2161-JH000	Carbon	1kΩ	1/6W	±5%	1
R214	RD1-8-4161-JH000	Carbon	180kΩ	1/6W	±5%	1
R215	RD1-0-2161-JH000	Carbon	1kΩ	1/6W	±5%	1
R216	RD1-8-4161-JH000	Carbon	180kΩ	1/6W	±5%	1
R217	RD1-0-2161-JH000	Carbon	1kΩ	1/6W	±5%	1
R218	RD8-2-3161-JH000	Carbon	82kΩ	1/6W	±5%	1
R315	RD1-0-2251-JM000	Carbon	1kΩ	1/4W	±5%	1
R316	RD1-0-2251-JM000	Carbon	1kΩ	1/4W	±5%	1
R317	RD2-2-1251-JM000	Carbon	220Ω	1/4W	±5%	1
R318	RD2-7-1251-JM000	Carbon	270Ω	1/4W	±5%	1
R319	RD2-7-2161-JH000	Carbon	2.7kΩ	1/6W	±5%	1
R320	RD2-2-4161-JH000	Carbon	220kΩ	1/6W	±5%	1
R321	RD1-0-3161-JH000	Carbon	10kΩ	1/6W	±5%	1
R401	RD4-7-2251-JM000	Carbon	4.7kΩ	1/4W	±5%	1
R402	RD1-0-3161-JH000	Carbon	10kΩ	1/6W	±5%	1
R403	RD1-0-2161-JH000	Carbon	1kΩ	1/6W	±5%	1
R404	RD5-6-3161-JH000	Carbon	56kΩ	1/6W	±5%	1

Ref. No.	Part No.	Description				Q'ty
	FUNCTION P.C.B. ASSY					
PCB3	141-0-1939-09140	Function P.C.B. Assy				1
	4-2262-22050	Function P.C.B.				1
	141-2-2419-33000	Reflector				5
SW401	4-2312-05300	Keyboard Switch 6mm (Phono)				1
SW402	4-2312-05300	Keyboard Switch 6mm (Tuner)				1
SW403	4-2312-05300	Keyboard Switch 6mm (Compact Disc)				1
SW404	4-2312-05300	Keyboard Switch 6mm (AUX/Video)				1
SW405	4-2312-05300	Keyboard Switch 6mm (Tape Monitor)				1
B	4-2359-77807	Connector 5P Assy				1
C	4-2359-77808	Connector 6P Assy				1
	CAPACITORS					
C403	CI1-0-3250-MF00R	Boundary	0.01μF	25V	±20%	1
C404	CI1-0-3250-MF00R	Boundary	0.01μF	25V	±20%	1
C405	CI1-0-3250-MF00R	Boundary	0.01μF	25V	±20%	1
C406	CI1-0-3250-MF00R	Boundary	0.01μF	25V	±20%	1
C407	CI1-0-3250-MF00R	Boundary	0.01μF	25V	±20%	1
	SEMICONDUCTORS					
D311	202-5-3210-10011	Zener Diode, GZA 10 X				1
D312	202-5-3210-10011	Zener Diode, GZA 10 X				1
D405	4-2029-73860	L.E.D., SEL 1413 E (Phono)				1
D406	4-2029-73860	L.E.D., SEL 1413 E (Tuner)				1
D407	4-2029-73860	L.E.D., SEL 1413 E (Compact Disc)				1
D408	4-2029-73860	L.E.D., SEL 1413 E (AUX/Video)				1
D409	4-2029-73850	L.E.D., SEL 1213 C (Tape Monitor)				1
	RESISTORS					
R322	RD5-6-1251-JM000	Carbon	560Ω	1/4W	±5%	1
R323	RD1-2-2251-JM000	Carbon	1.2kΩ	1/4W	±5%	1
R324	RD1-0-3251-JM000	Carbon	10kΩ	1/4W	±5%	1
	TONE CONTROL P.C.B. ASSY					
PCB4	141-0-1939-09151	Tone Control P.C.B. Assy				1
	4-2262-22060	Tone Control P.C.B.				1
SW406	4-2319-77780	Swich Push 1 Key (Meter Lange)				1
SW407	4-2319-77780	Swich Push 1 Key (Loudness)				1
VR402	4-2229-75600	Slide Volume (W-250kΩx2, Bass)				1
VR403	4-2229-75600	Slide Volume (W-250kΩx2, Treble)				1
VR406	4-2229-75590	Slide Volume (W-200kΩ, Balance)				1
VR407	4-2229-75610	Slide Volume (A-100kΩx2, Volume)				1
	141-2-2419-33100	Mount LED				1
	141-2-3769-17800	Spacer LED				1
A	4-2359-77809	Connector 6P Assy				1
D	131-0-4006-31418	Cord Assy				1
E	131-0-4006-31423	Cord Assy				1
	4-2379-21120	Terminal				2
	CAPACITORS					
C121	CD4-7-5250-0001V	Electrolytic	4.7μF	25V		1
C122	CC1-0-1500-KE01R	Ceramic	100pF	50V	±10%	1
C123	CC6-8-0500-KD00C	Ceramic	68pF	50V	±10%	1
C124	CC1-0-0500-DD00C	Ceramic	10pF	50V	±0.5%	1
C125	CD1-0-6160-0002V	Electrolytic	10μF	16V		1
C126	CD4-7-5250-0002V	Electrolytic	4.7μF	25V		1
C127	CC2-2-1500-KE01R	Ceramic	220pF	50V	±10%	1
C129	CD1-0-6160-0002V	Electrolytic	10μF	16V		1
C130	CM1-0-3500-J00TV	Mylar	0.01μF	50V	±5%	1
C134	CM2-2-3500-J00BV	Mylar	0.022μF	50V	±5%	1
C135	CC2-7-1500-KD00C	Ceramic	270pF	50V	±10%	1
C138	CC2-2-1500-KE01R	Ceramic	220pF	50V	±10%	1
C139	CM4-7-3500-J00TV	Mylar	0.047μF	50V	±5%	1

P.C.BOARD PARTS LIST (Continued)

Ref. No.	Part No.	Description				Q'ty
C159	CD1-0-6250-0001V	Electrolytic	10μF	25V		1
C160	CC1-0-2500-KE01R	Ceramic	0.001μF	50V	±10%	1
C161	CD1-0-6250-0001V	Electrolytic	10μF	25V		1
C162	CD1-0-6250-0001V	Electrolytic	10μF	25V		1
C221	CD4-7-5250-0001V	Electrolytic	4.7μF	25V		1
C222	CC1-0-1500-KE01R	Ceramic	100pF	50V	±10%	1
C223	CC6-8-0500-KD00C	Ceramic	68pF	50V	±10%	1
C224	CC1-0-0500-DD00C	Ceramic	10pF	50V	±0.5%	1
C225	CD1-0-6160-0002V	Electrolytic	10μF	16V		1
C226	CD4-7-5250-0002V	Electrolytic	4.7μF	25V		1
C227	CC2-2-1500-KE01R	Ceramic	220pF	50V	±10%	1
C229	CD1-0-6160-0002V	Electrolytic	10μF	16V		1
C230	CM1-0-3500-J00TV	Mylar	0.01μF	50V	±5%	1
C234	CM2-2-3500-J00BV	Mylar	0.022μF	50V	±5%	1
C235	CC2-7-1500-KD00C	Ceramic	270pF	50V	±10%	1
C238	CC2-2-1500-KE01R	Ceramic	220pF	50V	±10%	1
C239	CM4-7-3500-J00TV	Mylar	0.047μF	50V	±5%	1
C259	CD1-0-6250-0001V	Electrolytic	10μF	25V		1
C260	CC1-0-2500-KE01R	Ceramic	0.001μF	50V	±10%	1
C261	CD1-0-6250-0001V	Electrolytic	10μF	25V		1
C262	CD1-0-6250-0001V	Electrolytic	10μF	25V		1
C319	CD1-0-7250-0006V	Electrolytic	100μF	25V		1
C320	CD1-0-7250-0006V	Electrolytic	100μF	25V		1
C327	CD1-0-6250-0001V	Electrolytic	10μF	25V		1
	SEMICONDUCTORS					
D104	D00---SLP--273B-	L.E.D., SLP 273 B (Power Level Meter)				1
D105	D00---SLP--273B-	L.E.D., SLP 273 B (Power Level Meter)				1
D106	D00---SLP--273B-	L.E.D., SLP 273 B (Power Level Meter)				1
D107	D00---SLP--273B-	L.E.D., SLP 273 B (Power Level Meter)				1
D108	D00---SLP--273B-	L.E.D., SLP 273 B (Power Level Meter)				1
D109	D00---SLP--273B-	L.E.D., SLP 273 B (Power Level Meter)				1
D110	D00---SLP--273B-	L.E.D., SLP 273 B (Power Level Meter)				1
D204	D00---SLP--273B-	L.E.D., SLP 273 B (Power Level Meter)				1
D205	D00---SLP--273B-	L.E.D., SLP 273 B (Power Level Meter)				1
D206	D00---SLP--273B-	L.E.D., SLP 273 B (Power Level Meter)				1
D207	D00---SLP--273B-	L.E.D., SLP 273 B (Power Level Meter)				1
D208	D00---SLP--273B-	L.E.D., SLP 273 B (Power Level Meter)				1
D209	D00---SLP--273B-	L.E.D., SLP 273 B (Power Level Meter)				1
D210	D00---SLP--273B-	L.E.D., SLP 273 B (Power Level Meter)				1
IC101	4-2069-73670	IC, IR 2 E 19				1
IC201	4-2069-73670	IC, IR 2 E 19				1
IC404	206-5-3266-45810	IC, LA 6458 SS				1
Q102	203-5-5000-53660	Transistor, 2SC 536				1
or	4-2039-72201	Transistor, 2SC 2603				1
Q103	203-5-5000-53660	Transistor, 2SC 536				1
or	4-2039-72201	Transistor, 2SC 2603				1
Q202	203-5-5000-53660	Transistor, 2SC 536				1
or	4-2039-72201	Transistor, 2SC 2603				1
Q203	203-5-5000-53660	Transistor, 2SC 536				1
or	4-2039-72201	Transistor, 2SC 2603				1
	RESISTORS					
R119	RD1-5-4161-JH000	Carbon	150kΩ	1/6W	±5%	1
R120	RD2-7-2161-JH000	Carbon	2.7kΩ	1/6W	±5%	1
R121	RD4-7-2161-JH000	Carbon	4.7kΩ	1/6W	±5%	1
R122	RD3-3-2161-JH000	Carbon	3.3kΩ	1/6W	±5%	1
R123	RD4-7-2161-JH000	Carbon	4.7kΩ	1/6W	±5%	1
R124	RD2-2-2161-JH000	Carbon	2.2kΩ	1/6W	±5%	1
R126	RD8-2-1161-JH000	Carbon	820Ω	1/6W	±5%	1
R127	RD8-2-1161-JH000	Carbon	820Ω	1/6W	±5%	1
R131	RD1-0-5161-JH000	Carbon	150kΩ	1/6W	±5%	1
R132	RD2-2-3161-JH000	Carbon	22kΩ	1/6W	±5%	1
R136	RD3-9-1161-JH000	Carbon	390Ω	1/6W	±5%	1

Ref. No.	Part No.	Description				Q'ty
R137	RD3-9-1161-JH000	Carbon	390Ω	1/6W	±5%	1
R141	RD5-6-2161-JH000	Carbon	5.6kΩ	1/6W	±5%	1
R142	RD5-6-2161-JH000	Carbon	5.6kΩ	1/6W	±5%	1
R145	RD5-6-2161-JH000	Carbon	5.6kΩ	1/6W	±5%	1
R172	RD1-5-2161-JH000	Carbon	1.5kΩ	1/6W	±5%	1
R173	RD3-9-2161-JH000	Carbon	3.9kΩ	1/6W	±5%	1
R174	RD3-3-2161-JH000	Carbon	3.3kΩ	1/6W	±5%	1
R219	RD1-5-4161-JH000	Carbon	150kΩ	1/6W	±5%	1
R220	RD2-7-2161-JH000	Carbon	2.7kΩ	1/6W	±5%	1
R221	RD4-7-2161-JH000	Carbon	4.7kΩ	1/6W	±5%	1
R222	RD3-3-2161-JH000	Carbon	3.3kΩ	1/6W	±5%	1
R223	RD4-7-2161-JH000	Carbon	4.7kΩ	1/6W	±5%	1
R224	RD2-2-2161-JH000	Carbon	2.2kΩ	1/6W	±5%	1
R226	RD8-2-1161-JH000	Carbon	820Ω	1/6W	±5%	1
R227	RD8-2-1161-JH000	Carbon	820Ω	1/6W	±5%	1
R231	RD1-5-4161-JH000	Carbon	150kΩ	1/6W	±5%	1
R232	RD2-2-3161-JH000	Carbon	22kΩ	1/6W	±5%	1
R236	RD3-9-1161-JH000	Carbon	390Ω	1/6W	±5%	1
R237	RD3-9-1161-JH000	Carbon	390Ω	1/6W	±5%	1
R241	RD5-6-2161-JH000	Carbon	5.6kΩ	1/6W	±5%	1
R242	RD5-6-2161-JH000	Carbon	5.6kΩ	1/6W	±5%	1
R245	RD5-6-2161-JH000	Carbon	5.6kΩ	1/6W	±5%	1
R272	RD1-5-2161-JH000	Carbon	1.5kΩ	1/6W	±5%	1
R273	RD3-9-2161-JH000	Carbon	3.9kΩ	1/6W	±5%	1
R274	RD3-3-2161-JH000	Carbon	3.3kΩ	1/6W	±5%	1
R313	RD5-6-A161-JH000	Carbon	5.6Ω	1/6W	±5%	1
R314	RD5-6-A161-JH000	Carbon	5.6Ω	1/6W	±5%	1
	SPEAKER TERMINAL P.C.B. ASSY					
PCB5	141-0-1939-09172	Speaker Terminal P.C.B. Assy				1
	4-2262-22080	Speaker Terminal P.C.B.				1
	4-2372-01160	Speaker 8P Terminal (Speaker)				1
	111-2-6220-11100	Wire Wrap Terminal				6
	CAPACITORS					
C507	CC4-7-1500-KE00C	Ceramic	470pF	50V	±10%	1
C508	CC4-7-1500-KE00C	Ceramic	470pF	50V	±10%	1
C509	CC4-7-1500-KE00C	Ceramic	470pF	50V	±10%	1
C510	CC4-7-1500-KE00C	Ceramic	470pF	50V	±10%	1
	TRANSISTOR P.C.B. ASSY					
PCB6	141-0-1939-09180	Transistor P.C.B. Assy				2
	4-2262-22090	Transistor P.C.B.				1
	SEMICONDUCTORS					
D412	205-5-9040-44210	Diode, DS 442				1
Q403	4-2039-72100	Transistor, 2SD 947				1
	SWITCH P.C.B. ASSY					
PCB7	141-0-1939-09193	Switch P.C.B. Assy				1
	4-2262-22100	Switch P.C.B.				1
S408	⚠ 4-2319-76340	Switch Push Power (Power)				1
S409	4-2319-77340	Switch Push 1 Key (Speaker A)				1
S410	4-2319-77340	Switch Push 1 Key (Speaker B)				1
	4-2352-00970	Headphone Jack 3P (Headphones)				1
	111-2-6220-11100	Wire Wrap Terminal				2
	131-2-6114-00200	Cover Safety				1
	4-2372-00830	EC Terminal 1P				2
	4-2439-72192	Wire 6 Parallel				1
	4-2439-72193	Wire 2 Parallel				1

P.C.BOARD PARTS LIST (Continued)

Ref. No.	Part No.	Description			Q'ty
	CAPACITOR				
C301 ⚠	4-2239-70970	Capacitor	0.01μF	400V +100,-0%	1
	RESISTORS				
R175	RH5-6-1202-JZ000	Metal	560Ω	2W ±5%	1
R176	RD2-2-1251-JM000	Carbon	220Ω	1/4W ±5%	1
R177	RD2-7-1251-JM000	Carbon	270Ω	1/4W ±5%	1
R275	RH5-6-1202-JZ000	Metal	560Ω	2W ±5%	1
R276	RD2-2-1251-JM000	Carbon	220Ω	1/4W ±5%	1
R277	RD2-7-1251-JM000	Carbon	270Ω	1/4W ±5%	1

NOTES:

1. Parts order must contain Model Number, Part Number and Description.
2. Ordering quantity of screws and resistors must be multiple of 10 pcs.

PRODUCT SAFETY NOTICE

Each precaution in this manual should be followed during servicing. Components identified with the IEC symbol ⚠ in the parts list and the schematic diagram designate components in which safety can be of special significance. When replacing a component identified with ⚠, use only the replacement parts designated, or parts with the same ratings of resistance, wattage or voltage that are designated in the parts list in this manual. Leakage-current or resistance measurements must be made to determine that exposed parts are acceptably insulated from the supply circuit before returning the product to the customer.

SWITCH P.C.BOARD

(BOTTOM VIEW)

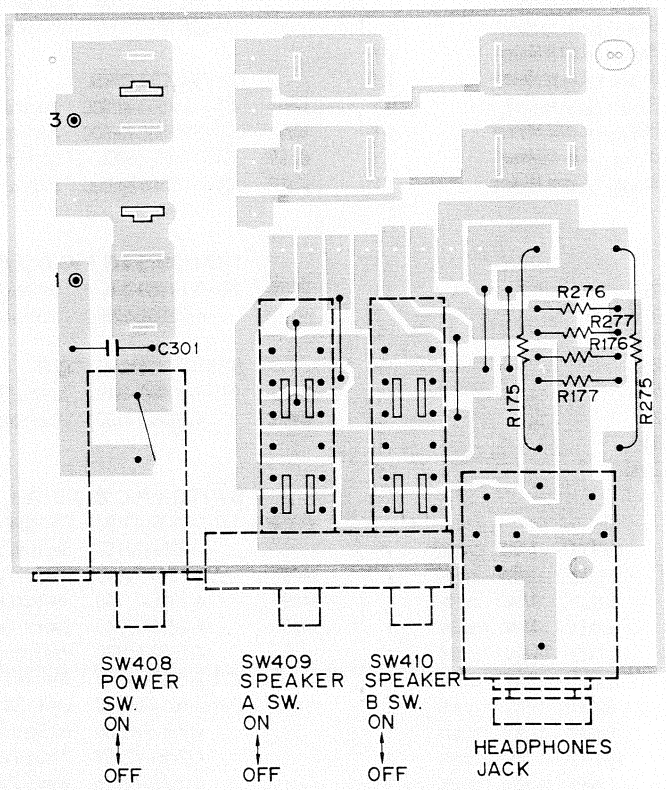

MAIN PRINTED CIRCUIT BOARD

(BOTTOM VIEW)

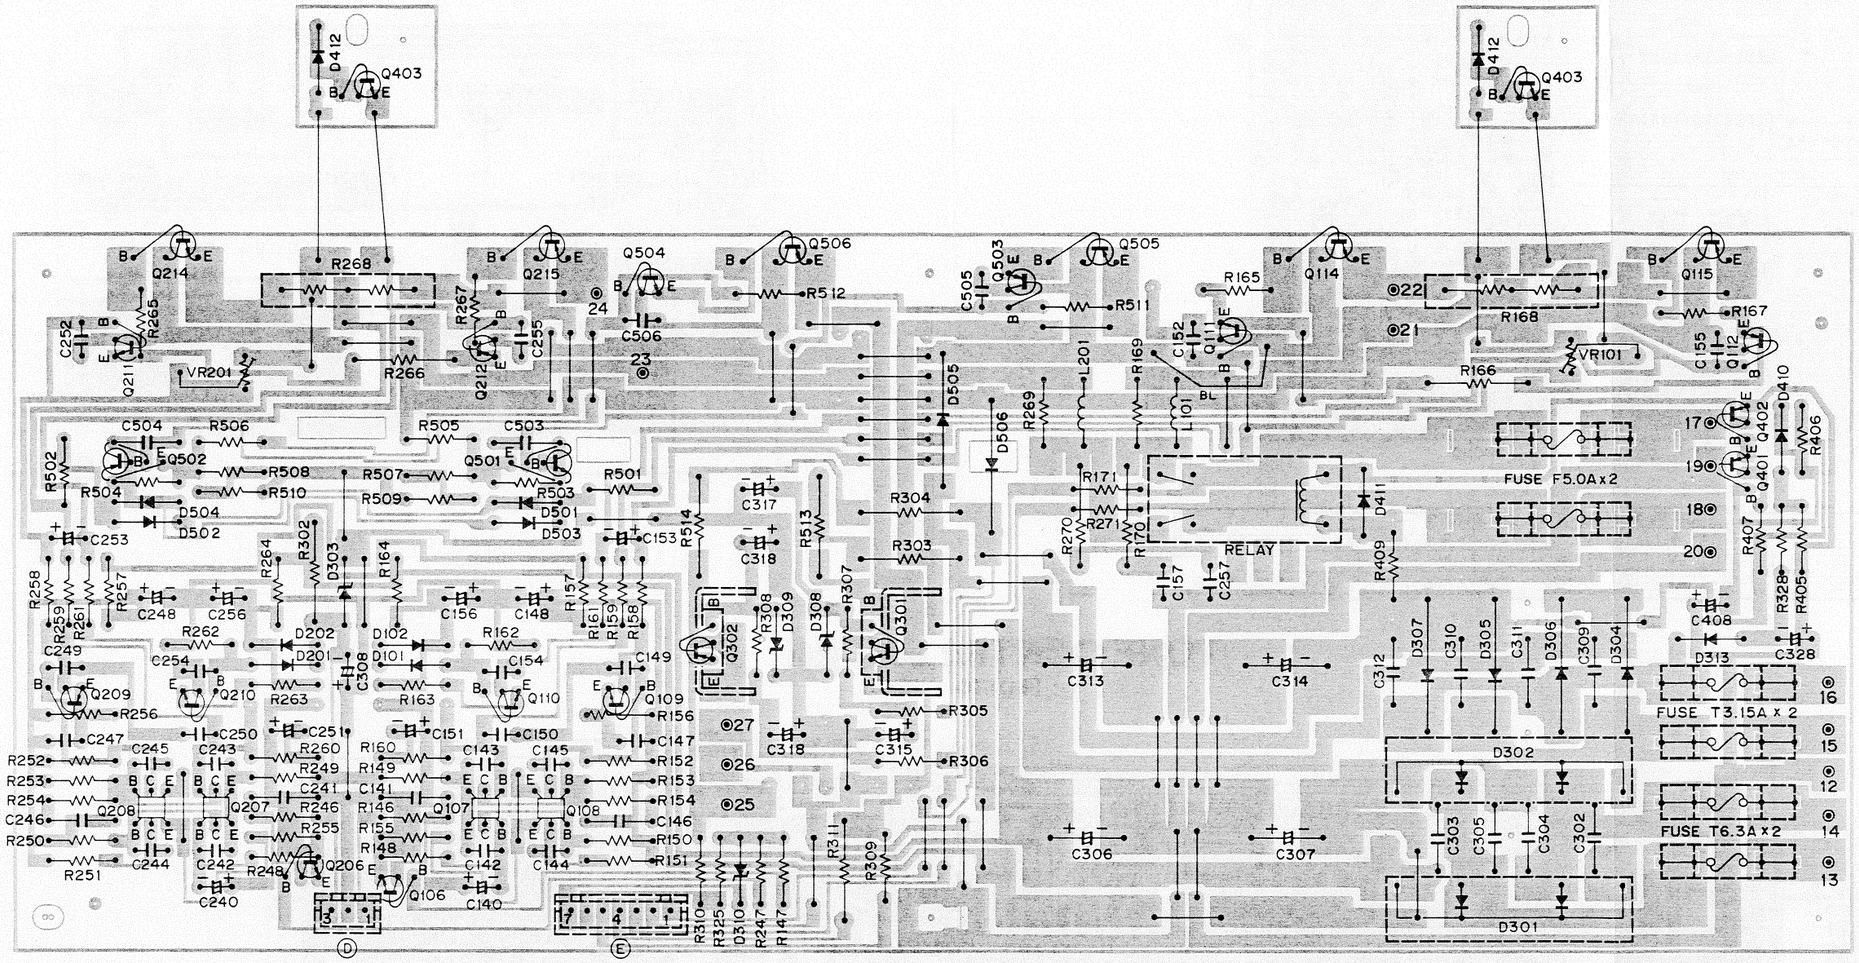

SP TERMINAL P.C.BOARD

(BOTTOM VIEW)

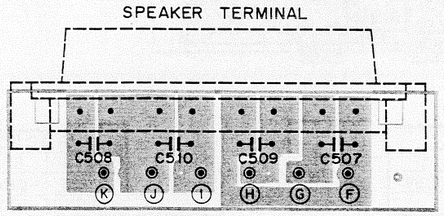

TRANSISTOR DC VOLTAGES

SYMBOL No.	DEVICE	B	C	E	SYMBOL No.	DEVICE	B	C	E
Q106,206	2SD1012	−2.8V	0V	0V	Q302	2SB632	−18.0V	−26.0V	−17.4V
Q107,207	2SC3065	−0.2V	34.0V	−0.8V	Q401	2SA608	−1.4V	−0.8V	−0.8V
Q108,208	2SC3064	34.0V	60.5V	33.3V	Q402	2SA608	−0.8V	0.1V	0V
Q109,209	2SA1209	60.8V	1.5V	61.0V	Q501	2SC2603	24.6V	64.1V	25.9V
Q110,210	2SC2911	−60.5V	−1.5V	−61.0V	Q502	2SA1115	−24.6V	−63.9V	−25.8V
Q111,211	2SC3117	1.1V	61.5V	−1.1V	Q503	2SB631	64.3V	31.8V	64.0V
Q112,212	2SA1249	−0.6V	−61.5V	−1.1V	Q504	2SD600	−64.2V	−31.8V	−63.9V
Q114,214	2SC3281	0.6V	61.5V	0V	Q505	2SA1302	64.0V	31.8V	64.0V
Q115,215	2SA1302	−0.6V	−61.5V	0V	Q506	2SC3281	−63.9V	−31.8V	−64.3V
Q301	2SD612	18.4V	28.2V	17.8V					

INPUT P.C.BOARD

(BOTTOM VIEW)

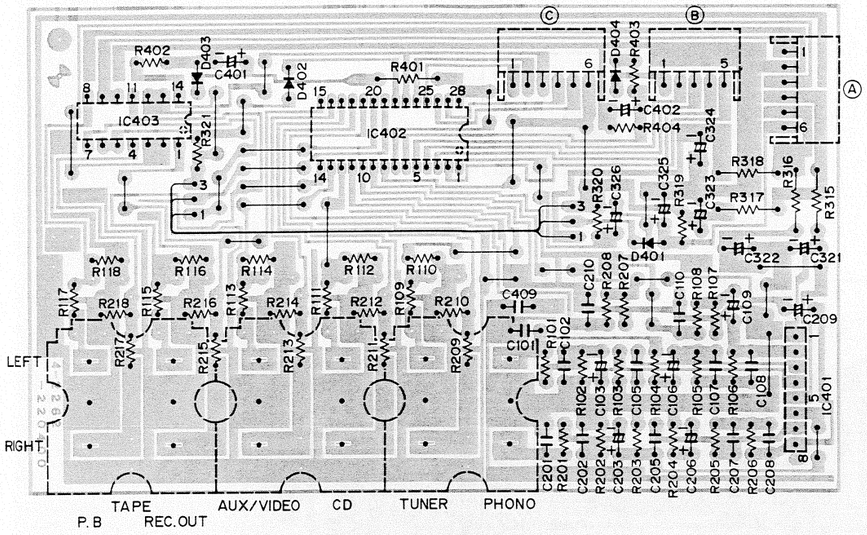

IC PIN NUMBERS DC VOLTAGES															
SYMBOL No.	DEVICE	1	2	3	4	5	6	7	8	9	10	11	12	13	14
IC401	M5218L	11.8V	0V	0V	0V	−11.6V	0V	0V	0V						
IC403	LC4066	0V	0V	0V	0V	−9.1V	−9.1V	−11.0V	0V	0V	0V	0V	11.5V	11.5V	11.5V

FUNCTION P.C.BOARD

(BOTTOM VIEW)

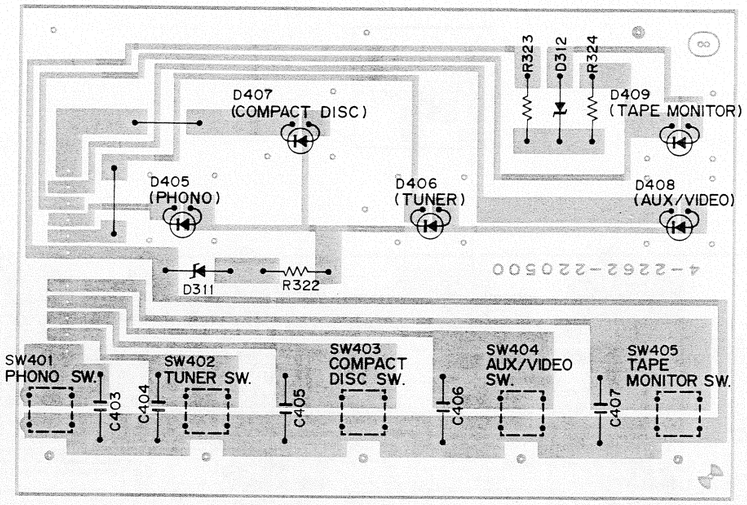

TONE CONTROL P.C.BOARD

(BOTTOM VIEW)

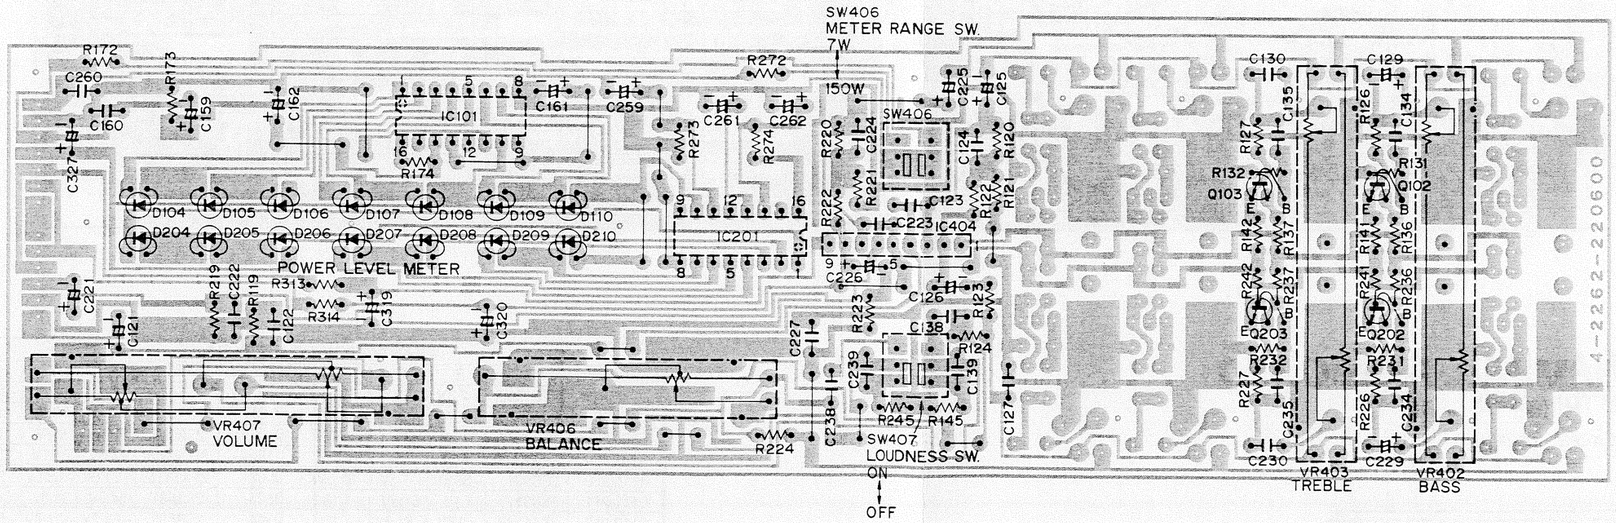

IC PIN NUMBERS DC VOLTAGES																	
SYMBOL No.	DEVICE	1	2	3	4	5	6	7	8	9	10	11	12	13	16	15	16
IC101,102	IR2E19	12.4V	13.9V	15.4V	13.9V	15.4V	13.9V	15.4V	0V	0.3V	16.9V	0V	0V	0V	2.7V	0V	0.9V
IC404	LA6458	15.9V	0V	0V	0V	−15.8V	0V	0V	0V	15.9V							

TRANSISTOR DC VOLTAGES				
SYMBOL No.	DEVICE	B	C	E
Q102,202	2SC536	−0.5V	15.1V	−1.1V
Q103,203	2SC536	−0.3V	15.1V	−0.9V

POINT TO POINT WIRING DIAGRAM

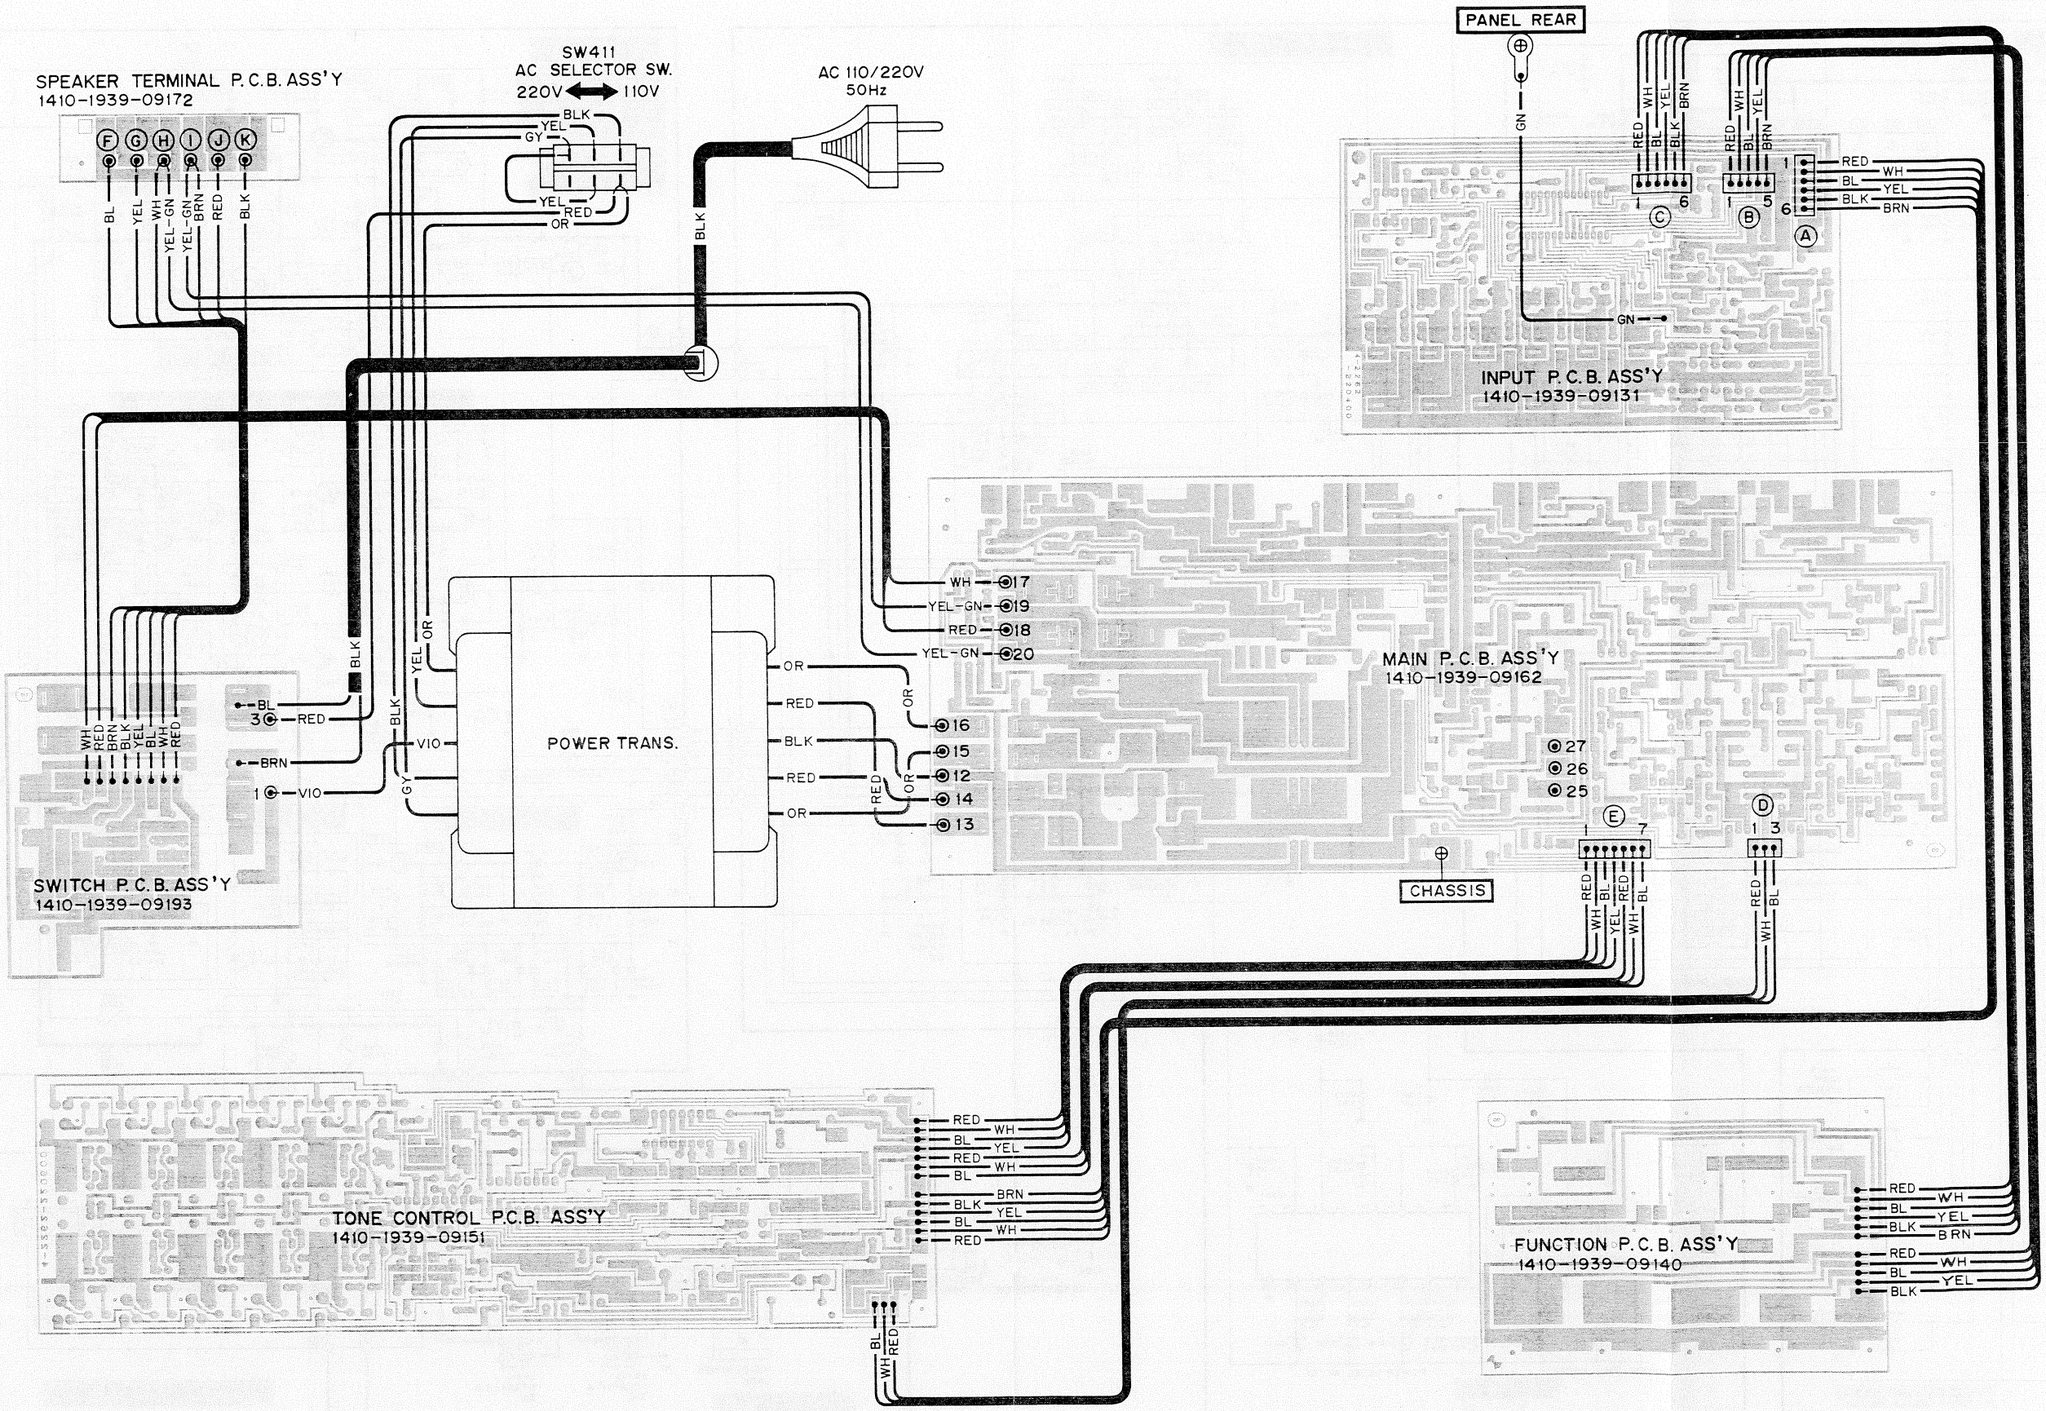

No.	Name	Position	No.	Name	Position
SW401	PHONO Switch	OFF	SW407	LOUDNESS Switch	OFF
SW402	TUNER Switch	OFF	SW408	POWER Switch	OFF
SW403	COMPACT DISC Switch	OFF	SW409	SPEAKER A Switch	OFF
SW404	AUX/VIDEO Switch	OFF	SW410	SPEAKER B Switch	OFF
SW405	TAPE MONITOR Switch	OFF	SW411	AC SELECTOR Switch	220V
SW406	METER RANGE Switch	150W			

SCHEMATIC DIAGRAM

INPUT P.C.B. ASS'Y
1410-1939-09131

IC401 M5218L-R
PHONO EQ. AMPLIFIER CIRCUIT

TONE CONTROL P.C.B. ASS'Y
1410-1939-09181

Q102,Q103,Q202,Q203 2SC536 IC404 LA6458SS
TONE CONTROL CIRCUIT

MAIN P.C.B. ASS'Y
1410-1939-09162

Q108 2SC3064 Q109 2SA1209
Q107 2SC3065 Q111 2SC3117
Q114 2SC3281 Q108 2SD1012
Q110 2SC2911 Q112 2SA1249
Q115 2SA1302 Q402 2SD947
POWER AMPLIFIER

Q501 2SC2603 Q502 2SA1115
Q503 2SB631 Q504 2SD600
Q505 2SA1302 Q506 2SC3281
POWER AMPLIFIER

TRANSISTOR P.C.B.
1410-1939-09180 ASS'Y

Q208 2SC3064 Q209 2SA1209 Q403 2SD947 Q211 2SC3117 Q214 2SC3281
Q206 2SD1012 Q207 2SC3065 Q210 2SC2911 Q212 2SA1249 Q215 2SA1302
POWER AMPLIFIER

TRANSISTOR P.C.B.
1410-1939-09180 ASS'Y

Q302 2SB632 Q301 2SD612
VOLTAGE REGULATOR CIRCUIT

Q401, Q402 2SA608
RELAY DRIVING CIRCUIT

IC402 LC7815H IC403 LC4066BH
SWITCHING CIRCUIT

FUNCTION P.C.B. ASS'Y
1410-1939-09140

IC101, 201 IR2E19
LED METER CIRCUIT

POWER LEVEL METER

POWER LEVEL METER

SWITCH P.C.B. ASS'Y
1410-1939-09193

SPEAKER TERMINAL P.C.B. ASS'Y
1410-1939-09172

SEMICONDUCTOR LEAD IDENTIFICATION

TRANSISTOR	FRONT VIEW	BOTTOM VIEW
2SC536 2SA608 2SA1115 2SC2603		
2SA1209 2SA1249 2SC2911 2SC3117 2SB631 2SB632 2SD600 2SD612		
2SA1302 2SC3281		
2SD1012		
2SC3064 2SC3065		
TERMINAL NAME		
B → BASE C → COLLECTOR E → EMITTER		

LA6458S FRONT / BOTTOM VIEWS

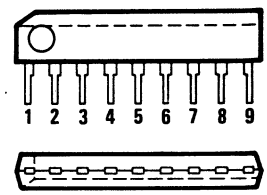

IR2E19 BOTTOM VIEW

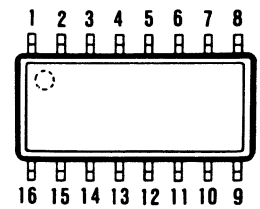

LC4066B BOTTOM VIEW

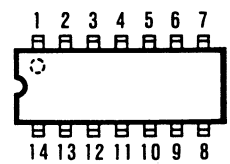

LC7815 BOTTOM VIEW

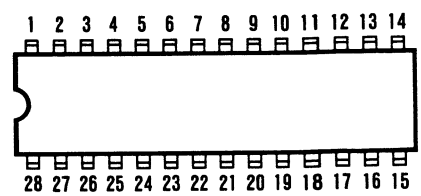

PRODUCT SAFETY NOTICE

Each precaution in this manual should be followed during servicing. Components identified with the IEC symbol ⚠ in the parts list and the schematic diagram designate components in which safety can be of special significance. When replacing a component identified with ⚠, use only the replacement parts designated, or parts with the same ratings of resistance, wattage or voltage that are designated in the parts list in this manual.
Leakage-current or resistance measurements must be made to determine that exposed parts are acceptably insulated from the supply circuit before returning the product to the customer.

NOTES:

1. All resistors values are indicated in "ohm" ($K=10^3$, $M=10^6$).
2. All capacitors values are indicated in "μF" ($P=10^{-12}$).
3. All voltages indicated on the schematics are measured under the following conditions.
   a. Use a V.T.V.M.
   b. All voltages ±10 % with respect to chassis ground.
   c. No signals at input terminals.
   d. AC input at 220 volts 50 Hz.
4. This is a basic schematic diagram.

Because Fisher products are subject to continuous improvement, Fisher Corporation reserves the right to make any changes or modifications without notice.

CORRECTION NOTICE

FISHER

Date:December,10,1986

Please add this notice to the Service Manuals listed below

INTEGRATED STEREO AMPLIFIER

CA-866

(EUROPE) **REF:WM-16839** **Issue Number 1**

The following items were misprinted. Please make the neccesary revision as indicated in the Service Manual Listed above.

No.	Page or Section		Ref. No.	Parts No.	Description	Q'ty	Remarks
1	Parts List Page 6	from	CA12	131-2-1701-91900	Knob Volume	1	
		to	CA12	131-2-1601-91900	Knob Volume	1	

REFFERENCE No. WM-19523N

Printed in Japan
December/'86/2000/K